



# 136G8769 🖄

# MCD60108BT7S1X20CV1

This product is not available in this store. Please contact your local <a href="{0}" class="arrow-xs active customer-care-link">Customer Service Center</a>. **Customer Service Center** [조

MCD60108BT7S1X20CV1

MCD60108BT751X20CV1 VLT\* Soft Starter MCD 600 With Int. Bypass Contactor 108 A, Three phase 380-690 V AC Frame size 1, IP20 Control Voltage: 24 VAC/VDC Other options according to Model code

Model code: MCD60108BT7S1X20CV1

VLT\* Soft Starter MCD 600 is a total motor starting solution.
Current transformers measure motor current and provide feedback for controlled motor ramp profiles.
Adaptive Acceleration Control (AAC) automatically employs the best starting and stopping profile for the application.
Emergency mode and Pump clean function are standard features.
The optional remote control panel adds more functionality, such as the Start/Stop buttons, and quick jump buttons to menu options.
VLT\* Soft Starter MCD 600 is available in three enclosure sizes: S1, S2 and S3
S1: IP20 with built-in bypass contactor (20–129 A)
S2: IP00 either with built-in bypass or non-bypass (144 –579 A).
S3: IP00 with built-in bypass, non-bypass or external bypass (590–1250 A)

To achieve protection rating IP20 on connections, order the Finger Guard Kit as an accessory.

## **PRODUCT DETAILS**

| TRODUCT DETAILS                |      |                            |
|--------------------------------|------|----------------------------|
| Gross weight                   |      | 6.3 kg                     |
| Net weight                     |      | 5.5 kg                     |
| Volume                         |      | 17.5891                    |
| EAN                            |      | 5710108652692              |
| Sales restriction control      |      |                            |
| Matr grp for sales restriction | 0001 | No grouping                |
| VLT® SOFT STARTER MCD600 SE    | RIES |                            |
| Product View (Switch)          | GLBL | Global (Standard)          |
| Product Group                  | MCD  | MCD Soft Starter series    |
| MCD Series                     | 6    | 600 Series                 |
| Current Rating                 | 0108 | 108 A                      |
| Bypass                         | В    | With Int. Bypass Contactor |
| Phase                          | Т    | Three phase                |
| Mains Voltage                  | 7    | Three phase 380-690 V AC   |
| Enclosure                      | S1   | Frame size 1               |
| Performance                    | X    | Reserved                   |
|                                |      |                            |

# Product Detail | MCD60108BT7S1X20CV1



# PRODUCT DETAILS

| IP Rating                    | 20      | IP20                    |  |
|------------------------------|---------|-------------------------|--|
| Control Voltage              | CV1     | 24 VAC/VDC              |  |
| Typecode Part 1              |         | MCD60108BT7S1X20CV1     |  |
| Product Catalog              | NO_VIEW | NO VIEW                 |  |
| Modelcode01                  |         | MCD60108BT7S1X20CV1     |  |
| Calculated Gross Weight [kg] |         | 6.1                     |  |
| Calculated Net Weight [kg]   |         | 5.5                     |  |
| Material Gross Weight        |         | 6.3                     |  |
| Material Net Weight          |         | 5.5                     |  |
| Plant from Orderline         |         | B901                    |  |
| Vendor                       | ERR01   | Cannot Determine Vendor |  |
| Recommended Factory          | ERR01   | Cannot Determine Vendor |  |
|                              |         |                         |  |

For Documents, Software, Visuals and more information, please use this link to visit the product page on Danfoss Product Store 🖄

| cessories |   |
|-----------|---|
|           | 175G0131<br>MCD 600 Ethernet/IP<br>MCD 600 Ethernet/IP supports network communication via easy-to-install<br>communication expansion cards. Each communication card includes a remote<br>LCP 601 connector port.              |
|           | <b>175G0127 </b><br><b>MCD 600 Modbus RTU</b><br>MCD 600 Modbus RTU supports network communication via easy-to-install<br>communication expansion cards. Each communication card includes a remote<br>LCP 601 connector port. |
|           | <b>175G0128</b><br><b>MCD 600 Profibus</b><br>MCD 600 Profibus supports network communication via easy-to-install<br>communication expansion cards. Each communication card includes a remote<br>LCP 601 connector port.      |
| Į         | 175G0129 2<br>MCD 600 Devicenet<br>MCD 600 Devicenet supports network communication via easy-to-install<br>communication expansion cards. Each communication card includes a remote<br>LCP 601 connector port.                |

## For more information, please use this link to visit the product page on Danfoss Product Store 🗈

ENGINEERING TOMORROW

|                         | 175G0130 B  |
|-------------------------|---|
|                         | MCD 600 Modbus TCP  |
| P                       | MCD 600 Modbus TCP supports network communication via easy-to-install             |
|                         | communication expansion cards. Each communication card includes a remote          |
|                         | LCP 601 connector port.   |
|                         | 175G0134⊠   |
| · 🔲 🎬                   | MCD 600 Remote Keypad/Display   |
| 200                     | The VLT <sup>®</sup> Soft Starter MCD 600 soft starters can be used with a remote |
|                         | LCP mounted up to 3 m (9.8 ft) away from the soft starter. This kit               |
|                         | contains a LCP601 + 3 meter cable and an expansion card with connection           |
|                         | port  |
|                         | 175G0133 ⊵  |
|                         | MCD 600 Pumping Smart Card  |
|                         | The MCD600 Pumping Smart Card provides dedicated inputs for pressure,             |
|                         | depth, temperature, and flow sensors to allow protection, control, and            |
|                         | monitoring integration in a range of pumping applications                         |
|                         | 175G0132 ⊵  |
|                         | MCD 600 Profinet  |
| 1º                      | MCD 600 Profinet supports network communication via easy-to-install               |
|                         | communication expansion cards. Each communication card includes a remote          |
|                         | LCP 601 connector port.   |
| _                       | 175G0187 🖻  |
|                         | Remote Control Panel LCP601   |
| \$0.4<br>• • •          | The VLT <sup>®</sup> Soft Starter MCD 600 soft starters can be used with a remote |
|                         | LCP mounted up to 3 m (9.8 ft) away from the soft starter. This kit               |
|                         | contains a LCP601 + 3 meter cable. Can be connected to existing                   |
|                         | communication card  |
|                         | 175G0030 🖻  |
| Image<br>coming<br>soon | Modbus TCP Option NIC52 version GF  |
|                         | 17560021 #  |
| Image                   | 175G0031 🖻<br>Ethernet IP option NIC52 version GF                                 |
| coming<br>soon          |   |
|                         | 175G0032 🖻  |
| Image<br>coming         | ProfiNet option, NIC52 version GF   |
| soon                    |   |

## For more information, please use this link to visit the product page on Danfoss Product Store 🗈

**Spare Parts** 

ENGINEERING TOMORROW



|  | <b>175G0153 </b> ☑<br><b>Fan Replacement Kit for small starters</b><br>Models MCD6-0042B ~ MCD6-0129B require a fan                 |  |
|--|---|--|
|  | <b>175G0156 </b> ▷<br>Sparepart Bypass Contactor Kit 86-129A<br>Each kit contains 1 internal bypass contactor. MCD600 soft starters |  |
|  | requires 3 internal bypass contactors for a full replacement  |  |
|  | 175G0138 🛙  |  |
|  | Control Card for 24V ctl.Frame S1,S2,S3   |  |
| and the state  | Control Card for 24V ctl.Frame size S1,S2 and S3. Boards sent as spare  |  |
|  | parts are not loaded with firmware. After replacing Control Card, load  |  |
|  | firmware into the soft starter.   |  |
|  | 175G0147 🗈  |  |
|  | Replacement SCR Kit 0086B-0108B starter   |  |
| and the second s | Each kit contains 1 SCR. MCD600 soft starters requires 3 SCRs for a full replacement  |  |
|  | 175G0141 🖻  |  |
|  | Motor Control Kit for small T7 starter  |  |
|  | Motor Control Kit for Frame size S1, Mains Voltage T7 (380-690V).   |  |
|  | Boards sent as spare parts are not loaded with firmware. After replacing  |  |
|  | Control Card, load firmware into the soft starter.  |  |
| i i  | 175G0135 🖻  |  |
|  | Kit Enclosure Opening Tools MCD 600   |  |
|  | Opening Tools MCD 600 in case of service.   |  |
| V V  | Tool consist of two parts to be used at top an bottom to release locks  |  |

Services



# 130R1131 🛛

DrivePro ExWarr Work Shop PG04 30 months DrivePro® Standard Extended Warranty provides repair at a Danfoss Drives workshop, or shipment of a replacement product to the site. You can only order DrivePro® Extended Warranty when purchased with a new drive. For drives previously shipped or purchased; contact your local Danfoss Drives sales office for extended warranty contract options.

#### For more information, please use this link to visit the product page on Danfoss Product Store 🗅



# Danfoss

## Services

| <ul> <li>130R1134 ☑</li> <li>DrivePro ExWarr Work Shop PG04 48 months</li> <li>DrivePro® Standard Extended Warranty provides repair at a Danfoss Drives workshop, or shipment of a replacement product to the site.</li> <li>You can only order DrivePro® Extended Warranty when purchased with a new drive. For drives previously shipped or purchased; contact your local Danfoss Drives sales office for extended warranty contract options.</li> </ul> |
|--|
| 130R1135<br>DrivePro ExWarr Work Shop PG04 54 months<br>DrivePro® Standard Extended Warranty provides repair at a Danfoss Drives<br>workshop, or shipment of a replacement product to the site.<br>You can only order DrivePro® Extended Warranty when purchased with a new<br>drive. For drives previously shipped or purchased; contact your local<br>Danfoss Drives sales office for extended warranty contract options.                                |
| <b>130R1137</b><br><b>∠</b><br><b>DrivePro ExWarr Work Shop PG04 66 months</b><br>DrivePro® Standard Extended Warranty provides repair at a Danfoss Drives<br>workshop, or shipment of a replacement product to the site.<br>You can only order DrivePro® Extended Warranty when purchased with a new<br>drive. For drives previously shipped or purchased; contact your local<br>Danfoss Drives sales office for extended warranty contract options.      |
| <b>130R1138</b><br><b>DrivePro ExWarr Work Shop PG04 72 months</b><br>DrivePro® Standard Extended Warranty provides repair at a Danfoss Drives<br>workshop, or shipment of a replacement product to the site.<br>You can only order DrivePro® Extended Warranty when purchased with a new<br>drive. For drives previously shipped or purchased; contact your local<br>Danfoss Drives sales office for extended warranty contract options.                  |
| 130R1136<br>DrivePro ExWarr Work Shop PG04 60 months<br>DrivePro® Standard Extended Warranty provides repair at a Danfoss Drives<br>workshop, or shipment of a replacement product to the site.<br>You can only order DrivePro® Extended Warranty when purchased with a new<br>drive. For drives previously shipped or purchased; contact your local<br>Danfoss Drives sales office for extended warranty contract options.                                |
| <b>130R1130</b><br><b>Z</b><br><b>DrivePro ExWarr Work Shop PG04 24 months</b><br>DrivePro® Standard Extended Warranty provides repair at a Danfoss Drives<br>workshop, or shipment of a replacement product to the site.<br>You can only order DrivePro® Extended Warranty when purchased with a new<br>drive. For drives previously shipped or purchased; contact your local<br>Danfoss Drives sales office for extended warranty contract options.      |
|  |

# For more information, please use this link to visit the product page on Danfoss Product Store 🗈



| <ul> <li>130R1132 ▷</li> <li>DrivePro ExWarr Work Shop PG04 36 months</li> <li>DrivePro® Standard Extended Warranty provides repair at a Danfoss Drives workshop, or shipment of a replacement product to the site.</li> <li>You can only order DrivePro® Extended Warranty when purchased with a new drive. For drives previously shipped or purchased; contact your local Danfoss Drives sales office for extended warranty contract options.</li> </ul> |
|--|
| 130R1133<br>DrivePro ExWarr Work Shop PG04 42 months<br>DrivePro® Standard Extended Warranty provides repair at a Danfoss Drives<br>workshop, or shipment of a replacement product to the site.<br>You can only order DrivePro® Extended Warranty when purchased with a new<br>drive. For drives previously shipped or purchased; contact your local<br>Danfoss Drives sales office for extended warranty contract options.                                |
| <b>130R1034</b> ☑<br><b>DrivePro ExWarr Onsite PG04 48 months</b><br>DrivePro® On-site Extended Warranty provides repair at the customer<br>site, or replacement at the customer site.<br>You can only order DrivePro® Extended Warranty when purchased with a new<br>drive. For drives previously shipped or purchased; contact your local<br>Danfoss Drives sales office for extended warranty contract options.   |
| <ul> <li>130R1031 ☑</li> <li>DrivePro ExWarr Onsite PG04 30 months</li> <li>DrivePro® On-site Extended Warranty provides repair at the customer site, or replacement at the customer site.</li> <li>You can only order DrivePro® Extended Warranty when purchased with a new drive. For drives previously shipped or purchased; contact your local Danfoss Drives sales office for extended warranty contract options.</li> </ul>                          |
| <ul> <li>130R1032 ▷</li> <li>DrivePro ExWarr Onsite PG04 36 months</li> <li>DrivePro® On-site Extended Warranty provides repair at the customer site, or replacement at the customer site.</li> <li>You can only order DrivePro® Extended Warranty when purchased with a new drive. For drives previously shipped or purchased; contact your local Danfoss Drives sales office for extended warranty contract options.</li> </ul>                          |
| <ul> <li>130R1035 ☑</li> <li>DrivePro ExWarr Onsite PG04 54 months</li> <li>DrivePro® On-site Extended Warranty provides repair at the customer site, or replacement at the customer site.</li> <li>You can only order DrivePro® Extended Warranty when purchased with a new drive. For drives previously shipped or purchased; contact your local Danfoss Drives sales office for extended warranty contract options.</li> </ul>                          |

## For more information, please use this link to visit the product page on Danfoss Product Store 🗈



## Services

| <ul> <li>130R1033 ☑</li> <li>DrivePro ExWarr Onsite PG04 42 months</li> <li>DrivePro® On-site Extended Warranty provides repair at the customer site, or replacement at the customer site.</li> <li>You can only order DrivePro® Extended Warranty when purchased with a new drive. For drives previously shipped or purchased; contact your local Danfoss Drives sales office for extended warranty contract options.</li> </ul> |
|---|
| 130R1030 ☑<br>DrivePro ExWarr Onsite PG04 24 months<br>DrivePro® On-site Extended Warranty provides repair at the customer<br>site, or replacement at the customer site.<br>You can only order DrivePro® Extended Warranty when purchased with a new<br>drive. For drives previously shipped or purchased; contact your local<br>Danfoss Drives sales office for extended warranty contract options.                              |
| <b>130R1038</b> ☑ <b>DrivePro ExWarr Onsite PG04 72 months</b> DrivePro® On-site Extended Warranty provides repair at the customer         site, or replacement at the customer site.         You can only order DrivePro® Extended Warranty when purchased with a new         drive. For drives previously shipped or purchased; contact your local         Danfoss Drives sales office for extended warranty contract options.  |
| 130R1036 ☑DrivePro ExWarr Onsite PG04 60 monthsDrivePro® On-site Extended Warranty provides repair at the customersite, or replacement at the customer site.You can only order DrivePro® Extended Warranty when purchased with a newdrive. For drives previously shipped or purchased; contact your localDanfoss Drives sales office for extended warranty contract options.  |
| 130R1037<br>DrivePro ExWarr Onsite PG04 66 months<br>DrivePro® On-site Extended Warranty provides repair at the customer<br>site, or replacement at the customer site.<br>You can only order DrivePro® Extended Warranty when purchased with a new<br>drive. For drives previously shipped or purchased; contact your local<br>Danfoss Drives sales office for extended warranty contract options.                                |
|   |

# For more information, please use this link to visit the product page on Danfoss Product Store 🗈