

**136G7354****MCD60527BT5S2X00CV2**

MCD60527BT5S2X00CV2

MCD60527BT5S2X00CV2

VLT® Soft Starter MCD 600

With Int. Bypass Contactor

527 A, Three phase 200-525 V AC

Frame size 2, IP00

Control Voltage: 110~120 VAC or 220~240 VAC

Other options according to Model code

**Model code:** MCD60527BT5S2X00CV2

VLT® Soft Starter MCD 600 is a total motor starting solution.

Current transformers measure motor current and provide feedback for controlled motor ramp profiles.

Adaptive Acceleration Control (AAC) automatically employs the best starting and stopping profile for the application.

Emergency mode and Pump clean function are standard features.

The optional remote control panel adds more functionality, such as the Start/Stop buttons, and quick jump buttons to menu options.

VLT® Soft Starter MCD 600 is available in three enclosure sizes: S1, S2 and S3

S1: IP20 with built-in bypass contactor (20–129 A)

S2: IP00 either with built-in bypass or non-bypass (144 –579 A).

S3: IP00 with built-in bypass, non-bypass or external bypass (590–1250 A)

To achieve protection rating IP20 on connections, order the Finger Guard Kit as an accessory.

**PRODUCT DETAILS**

<b>Gross weight</b>		20.3 kg
<b>Net weight</b>		19 kg
<b>Volume</b>		59.4 l
<b>EAN</b>		5710108638290
<b>Sales restriction control</b>		
<b>Matr grp for sales restriction</b>	0001	No grouping
<b>VLT® SOFT STARTER MCD600 SERIES</b>		
<b>Product View (Switch)</b>	GLBL	Global (Standard)
<b>Product Group</b>	MCD	MCD Soft Starter series
<b>MCD Series</b>	6	600 Series
<b>Current Rating</b>	0527	527 A
<b>Bypass</b>	B	With Int. Bypass Contactor
<b>Phase</b>	T	Three phase
<b>Mains Voltage</b>	5	Three phase 200-525 V AC
<b>Enclosure</b>	S2	Frame size 2
<b>Performance</b>	X	Reserved
<b>IP Rating</b>	00	IP00
<b>Control Voltage</b>	CV2	110~120 VAC or 220~240 VAC
<b>Typecode Part 1</b>		MCD60527BT5S2X00CV2

## PRODUCT DETAILS

Product Catalog	NO_VIEW	NO VIEW
Modelcode01		MCD60527BT5S2X00CV2
Calculated Gross Weight [kg]		19.8
Calculated Net Weight [kg]		19
Material Gross Weight		20.3
Material Net Weight		19
Plant from Orderline		B901
Vendor	ERR01	Cannot Determine Vendor
Recommended Factory	ERR01	Cannot Determine Vendor

For Documents, Software, Visuals and more information, please use this link to visit the product page on Danfoss Product Store [🔗](#)

## Accessories

**175G0186** [🔗](#)**MCD 600 Finger guards for 0144B-0579B**

Finger guards provide IP20 protection when used with cable of diameter 22 mm or greater.

**175G0131** [🔗](#)**MCD 600 Ethernet/IP**

MCD 600 Ethernet/IP supports network communication via easy-to-install communication expansion cards. Each communication card includes a remote LCP 601 connector port.

**175G0127** [🔗](#)**MCD 600 Modbus RTU**

MCD 600 Modbus RTU supports network communication via easy-to-install communication expansion cards. Each communication card includes a remote LCP 601 connector port.

**175G0128** [🔗](#)**MCD 600 Profibus**

MCD 600 Profibus supports network communication via easy-to-install communication expansion cards. Each communication card includes a remote LCP 601 connector port.

**175G0129** [🔗](#)**MCD 600 Devicenet**

MCD 600 Devicenet supports network communication via easy-to-install communication expansion cards. Each communication card includes a remote LCP 601 connector port.

For more information, please use this link to visit the product page on Danfoss Product Store [🔗](#)

Danfoss can accept no responsibility for possible errors in catalogs, brochures and other printed material. Danfoss reserves the right to alter its products without notice. This also applies to products already on order provided that such alterations can be made without sub-sequential changes being necessary in specifications already agreed. All trademarks in this material are property of the respective companies. Danfoss and the Danfoss logotype are trademarks of Danfoss A/S. All rights reserved.

Accessories



**175G0130** [🔗](#)

**MCD 600 Modbus TCP**

MCD 600 Modbus TCP supports network communication via easy-to-install communication expansion cards. Each communication card includes a remote LCP 601 connector port.



**175G0134** [🔗](#)

**MCD 600 Remote Keypad/Display**

The VLT® Soft Starter MCD 600 soft starters can be used with a remote LCP mounted up to 3 m (9.8 ft) away from the soft starter. This kit contains a LCP601 + 3 meter cable and an expansion card with connection port



**175G0133** [🔗](#)

**MCD 600 Pumping Smart Card**

The MCD600 Pumping Smart Card provides dedicated inputs for pressure, depth, temperature, and flow sensors to allow protection, control, and monitoring integration in a range of pumping applications



**175G0132** [🔗](#)

**MCD 600 Profinet**

MCD 600 Profinet supports network communication via easy-to-install communication expansion cards. Each communication card includes a remote LCP 601 connector port.



**175G0187** [🔗](#)

**Remote Control Panel LCP601**

The VLT® Soft Starter MCD 600 soft starters can be used with a remote LCP mounted up to 3 m (9.8 ft) away from the soft starter. This kit contains a LCP601 + 3 meter cable. Can be connected to existing communication card

Image coming soon

**175G0030** [🔗](#)

**Modbus TCP Option NIC52 version GF**

Image coming soon

**175G0031** [🔗](#)

**Ethernet IP option NIC52 version GF**

Image coming soon

**175G0032** [🔗](#)

**ProfNet option, NIC52 version GF**

**For more information, please use this link to visit the product page on Danfoss Product Store** [🔗](#)

Danfoss can accept no responsibility for possible errors in catalogs, brochures and other printed material. Danfoss reserves the right to alter its products without notice. This also applies to products already on order provided that such alterations can be made without sub-sequential changes being necessary in specifications already agreed. All trademarks in this material are property of the respective companies. Danfoss and the Danfoss logotype are trademarks of Danfoss A/S. All rights reserved.

## Spare Parts

**175G0159** [🔗](#)**Sparepart Bypass Contactor Kit 527-579A**

Each kit contains 1 internal bypass contactor. MCD600 soft starters requires 3 internal bypass contactors for a full replacement

**175G0140** [🔗](#)**Motor Control Kit for big T5 starter**

Motor Control Kit for Frame size S2,S3 Mains Voltage T5 (200-525V). Boards sent as spare parts are not loaded with firmware. After replacing Control Card, load firmware into the soft starter.

**175G0143** [🔗](#)**Bypass DriverKit for large starters**

Bypass DriverKit for S2 starters: Internally bypassed models MCD6-0287B ~ MCD6-0579B include a bypass driver board. Each soft starter requires 1 bypass driver board.

Image  
coming  
soon

**175G0152** [🔗](#)**Replacement SCR Kit 0527B-0579B starter**

Each phase arm kit contains 1 SCR. MCD600 soft starters requires 3 phase ark kits for a full replacement

**175G0154** [🔗](#)**Fan Replacement Kit for large starters**

Models MCD6-0144B ~ MCD6-1250B require a fan

**175G0137** [🔗](#)**Control Card for 230V ctl. Frame S2**

Boards sent as spare parts are not loaded with firmware. After replacing the motor control board and/or user interface board, load firmware into the soft starter.

**175G0135** [🔗](#)**Kit Enclosure Opening Tools MCD 600**

Opening Tools MCD 600 in case of service.  
Tool consist of two parts to be used at top an bottom to release locks

**For more information, please use this link to visit the product page on Danfoss Product Store** [🔗](#)

Danfoss can accept no responsibility for possible errors in catalogs, brochures and other printed material. Danfoss reserves the right to alter its products without notice. This also applies to products already on order provided that such alterations can be made without sub-sequential changes being necessary in specifications already agreed. All trademarks in this material are property of the respective companies. Danfoss and the Danfoss logotype are trademarks of Danfoss A/S. All rights reserved.

---

**Services**

---

**130R1140** [🔗](#)**DrivePro ExWarr Work Shop PG05 24 months**

DrivePro® Standard Extended Warranty provides repair at a Danfoss Drives workshop, or shipment of a replacement product to the site.

You can only order DrivePro® Extended Warranty when purchased with a new drive. For drives previously shipped or purchased; contact your local Danfoss Drives sales office for extended warranty contract options.

**130R1141** [🔗](#)**DrivePro ExWarr Work Shop PG05 30 months**

DrivePro® Standard Extended Warranty provides repair at a Danfoss Drives workshop, or shipment of a replacement product to the site.

You can only order DrivePro® Extended Warranty when purchased with a new drive. For drives previously shipped or purchased; contact your local Danfoss Drives sales office for extended warranty contract options.

**130R1142** [🔗](#)**DrivePro ExWarr Work Shop PG05 36 months**

DrivePro® Standard Extended Warranty provides repair at a Danfoss Drives workshop, or shipment of a replacement product to the site.

You can only order DrivePro® Extended Warranty when purchased with a new drive. For drives previously shipped or purchased; contact your local Danfoss Drives sales office for extended warranty contract options.

**130R1144** [🔗](#)**DrivePro ExWarr Work Shop PG05 48 months**

DrivePro® Standard Extended Warranty provides repair at a Danfoss Drives workshop, or shipment of a replacement product to the site.

You can only order DrivePro® Extended Warranty when purchased with a new drive. For drives previously shipped or purchased; contact your local Danfoss Drives sales office for extended warranty contract options.

**130R1145** [🔗](#)**DrivePro ExWarr Work Shop PG05 54 months**

DrivePro® Standard Extended Warranty provides repair at a Danfoss Drives workshop, or shipment of a replacement product to the site.

You can only order DrivePro® Extended Warranty when purchased with a new drive. For drives previously shipped or purchased; contact your local Danfoss Drives sales office for extended warranty contract options.

---

**For more information, please use this link to visit the product page on Danfoss Product Store** [🔗](#)

Danfoss can accept no responsibility for possible errors in catalogs, brochures and other printed material. Danfoss reserves the right to alter its products without notice. This also applies to products already on order provided that such alterations can be made without sub-sequential changes being necessary in specifications already agreed. All trademarks in this material are property of the respective companies. Danfoss and the Danfoss logotype are trademarks of Danfoss A/S. All rights reserved.

---

**Services**

---

**130R1143** [🔗](#)**DrivePro ExWarr Work Shop PG05 42 months**

DrivePro® Standard Extended Warranty provides repair at a Danfoss Drives workshop, or shipment of a replacement product to the site.

You can only order DrivePro® Extended Warranty when purchased with a new drive. For drives previously shipped or purchased; contact your local Danfoss Drives sales office for extended warranty contract options.

---

**130R1147** [🔗](#)**DrivePro ExWarr Work Shop PG05 66 months**

DrivePro® Standard Extended Warranty provides repair at a Danfoss Drives workshop, or shipment of a replacement product to the site.

You can only order DrivePro® Extended Warranty when purchased with a new drive. For drives previously shipped or purchased; contact your local Danfoss Drives sales office for extended warranty contract options.

---

**130R1148** [🔗](#)**DrivePro ExWarr Work Shop PG05 72 months**

DrivePro® Standard Extended Warranty provides repair at a Danfoss Drives workshop, or shipment of a replacement product to the site.

You can only order DrivePro® Extended Warranty when purchased with a new drive. For drives previously shipped or purchased; contact your local Danfoss Drives sales office for extended warranty contract options.

---

**130R1146** [🔗](#)**DrivePro ExWarr Work Shop PG05 60 months**

DrivePro® Standard Extended Warranty provides repair at a Danfoss Drives workshop, or shipment of a replacement product to the site.

You can only order DrivePro® Extended Warranty when purchased with a new drive. For drives previously shipped or purchased; contact your local Danfoss Drives sales office for extended warranty contract options.

---

**130R1044** [🔗](#)**DrivePro ExWarr Onsite PG05 48 months**

DrivePro® On-site Extended Warranty provides repair at the customer site, or replacement at the customer site.

You can only order DrivePro® Extended Warranty when purchased with a new drive. For drives previously shipped or purchased; contact your local Danfoss Drives sales office for extended warranty contract options.

---

**130R1045** [🔗](#)**DrivePro ExWarr Onsite PG05 54 months**

DrivePro® On-site Extended Warranty provides repair at the customer site, or replacement at the customer site.

You can only order DrivePro® Extended Warranty when purchased with a new drive. For drives previously shipped or purchased; contact your local Danfoss Drives sales office for extended warranty contract options.

---

**For more information, please use this link to visit the product page on Danfoss Product Store** [🔗](#)

Danfoss can accept no responsibility for possible errors in catalogs, brochures and other printed material. Danfoss reserves the right to alter its products without notice. This also applies to products already on order provided that such alterations can be made without sub-sequential changes being necessary in specifications already agreed. All trademarks in this material are property of the respective companies. Danfoss and the Danfoss logotype are trademarks of Danfoss A/S. All rights reserved.

---

**Services**

---

**130R1042** [🔗](#)**DrivePro ExWarr Onsite PG05 36 months**

DrivePro® On-site Extended Warranty provides repair at the customer site, or replacement at the customer site.

You can only order DrivePro® Extended Warranty when purchased with a new drive. For drives previously shipped or purchased; contact your local Danfoss Drives sales office for extended warranty contract options.

---

**130R1043** [🔗](#)**DrivePro ExWarr Onsite PG05 42 months**

DrivePro® On-site Extended Warranty provides repair at the customer site, or replacement at the customer site.

You can only order DrivePro® Extended Warranty when purchased with a new drive. For drives previously shipped or purchased; contact your local Danfoss Drives sales office for extended warranty contract options.

---

**130R1048** [🔗](#)**DrivePro ExWarr Onsite PG05 72 months**

DrivePro® On-site Extended Warranty provides repair at the customer site, or replacement at the customer site.

You can only order DrivePro® Extended Warranty when purchased with a new drive. For drives previously shipped or purchased; contact your local Danfoss Drives sales office for extended warranty contract options.

---

**130R1047** [🔗](#)**DrivePro ExWarr Onsite PG05 66 months**

DrivePro® On-site Extended Warranty provides repair at the customer site, or replacement at the customer site.

You can only order DrivePro® Extended Warranty when purchased with a new drive. For drives previously shipped or purchased; contact your local Danfoss Drives sales office for extended warranty contract options.

---

**130R1041** [🔗](#)**DrivePro ExWarr Onsite PG05 30 months**

DrivePro® On-site Extended Warranty provides repair at the customer site, or replacement at the customer site.

You can only order DrivePro® Extended Warranty when purchased with a new drive. For drives previously shipped or purchased; contact your local Danfoss Drives sales office for extended warranty contract options.

---

**130R1040** [🔗](#)**DrivePro ExWarr Onsite PG05 24 months**

DrivePro® On-site Extended Warranty provides repair at the customer site, or replacement at the customer site.

You can only order DrivePro® Extended Warranty when purchased with a new drive. For drives previously shipped or purchased; contact your local Danfoss Drives sales office for extended warranty contract options.

---

**For more information, please use this link to visit the product page on Danfoss Product Store** [🔗](#)

Danfoss can accept no responsibility for possible errors in catalogs, brochures and other printed material. Danfoss reserves the right to alter its products without notice. This also applies to products already on order provided that such alterations can be made without sub-sequential changes being necessary in specifications already agreed. All trademarks in this material are property of the respective companies. Danfoss and the Danfoss logotype are trademarks of Danfoss A/S. All rights reserved.

---

**Services**

---

**130R1046** [🔗](#)**DrivePro ExWarr Onsite PG05 60 months**

DrivePro® On-site Extended Warranty provides repair at the customer site, or replacement at the customer site.

You can only order DrivePro® Extended Warranty when purchased with a new drive. For drives previously shipped or purchased; contact your local Danfoss Drives sales office for extended warranty contract options.

**136G7354** [🔗](#)**MCD60527BT5S2X00CV2**

MCD60527BT5S2X00CV2

MCD60527BT5S2X00CV2

VLT® Soft Starter MCD 600

With Int. Bypass Contactor

527 A, Three phase 200-525 V AC

Frame size 2, IP00

Control Voltage: 110~120 VAC or 220~240 VAC

Other options according to Model code

**Model code:** MCD60527BT5S2X00CV2

VLT® Soft Starter MCD 600 is a total motor starting solution.

Current transformers measure motor current and provide feedback for controlled motor ramp profiles.

Adaptive Acceleration Control (AAC) automatically employs the best starting and stopping profile for the application.

Emergency mode and Pump clean function are standard features.

The optional remote control panel adds more functionality, such as the Start/Stop buttons, and quick jump buttons to menu options.

VLT® Soft Starter MCD 600 is available in three enclosure sizes: S1, S2 and S3

S1: IP20 with built-in bypass contactor (20–129 A)

S2: IP00 either with built-in bypass or non-bypass (144 –579 A).

S3: IP00 with built-in bypass, non-bypass or external bypass (590–1250 A)

To achieve protection rating IP20 on connections, order the Finger Guard Kit as an accessory.

---

**For more information, please use this link to visit the product page on Danfoss Product Store** [🔗](#)

Danfoss can accept no responsibility for possible errors in catalogs, brochures and other printed material. Danfoss reserves the right to alter its products without notice. This also applies to products already on order provided that such alterations can be made without sub-sequential changes being necessary in specifications already agreed. All trademarks in this material are property of the respective companies. Danfoss and the Danfoss logotype are trademarks of Danfoss A/S. All rights reserved.